

Installation of front clips (SN08) on Jeep Grand Cherokee and Dodge Durango models.

1. Take the SN08 clip and slide it under the forward edge of the caliper casting. We recommend the use of a pair of needle nose pliers to provide better grip and force. (left front caliper, lower mounting)



2. Once the clip is in place and secure, it may take a bit more than hand force to snap it into position.




3. With the aid of a brass hammer or rubber mallet, tap the clip into a full seated position.



4. Once the clip is in place and flush with the caliper.



5. It may take a tap on the flat side of the clip with the brass hammer or rubber mallet to get the bottom clip to snap into the caliper casting.
6. You may see a gap on the outer part of the clip and casting, but the opposite side will be flush against the casting snugly engaged onto the caliper.

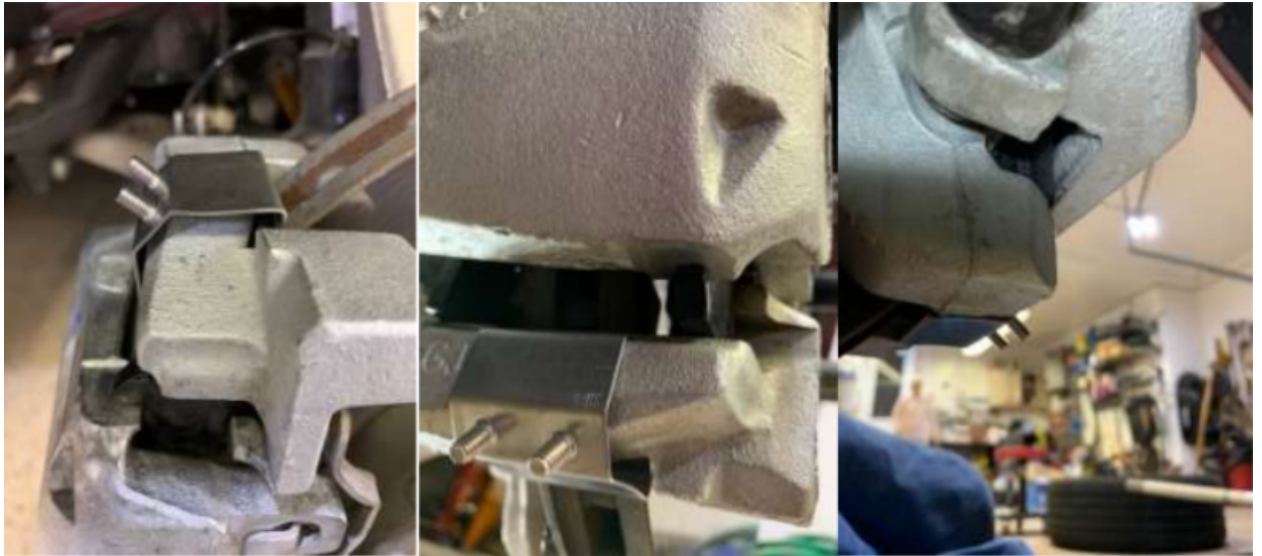

7. Once the clips are installed the caliper cover fits on as outlined in the instructions, no clearance issues between the clips and rotor.



8. Installation complete!

